
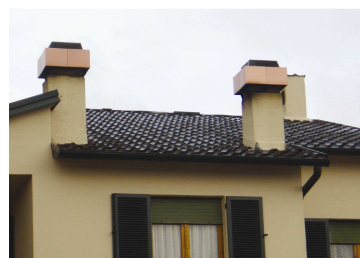



# BLINDOCOM

cement / metal shielding

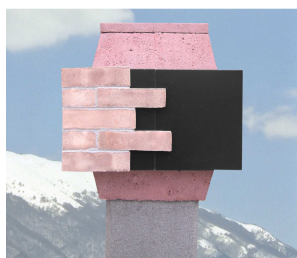

CODE	INTERNAL MEASURES OF THE FLUE	INTERNAL STRUCTURE	INTERNAL STRUCTURE COLOUR	BLINDAGE COLOUR	UNITARY WEIGHT KG
5 KR 2525	20 X 20 25 X 25	CONCRETE	GRAUND OF SIENA (REDISH)	ALLUMINIUM ADNOTIZED PAINTED COPPER 8/10	90
5 KR 3030	30 X 30 40 X 40				100
5 KL 2525	20 X 20 25 X 25	CONCRETE	GRAUND OF SIENA (REDISH)	DARK BROWN PAINTED STEEL ZINC 8/10	95
5 KL 3030	30 X 30 40 X 40				105

## ISTRUZIONI PER L'APPLICAZIONE DI BLINDOCOM ALLA CANNA FUMARIA

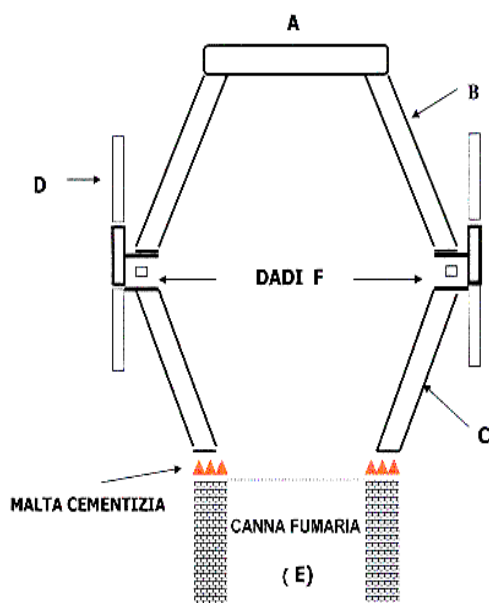

## INSTRUCTIONS FOR THE APPLICATION OF BLINDOCOM TO THE FLUE

THE APPLICATION OF THE CHIMNEY TO THE FLUE IS EXTREMELY EASY AND FAST TO EXECUTIVE.

- 1) REMOVE THE TOP (A)
- 2) REMOVE THE COVERAGE (B)
- 3) APPLY THE COMPO OF CONCRETE AT THE HEAD OF THE FLUE (E)
- 4) POSITION THE CONTROCOVERAGE © ON THE FLUE (E) AND  
VERIFY ITS STRAIGHTNESS
- 5) REASSEMBLE THE COMPONENTS (A) - (B)

### NOTE:

IF IT IS NECESSARY TO DISASSEMBLE THE BLINDAGE (D), UNSCREWING THE FOUR DICES (F), IN THE REASSEMBLAGING PHASE, PAY ATTENTION NOT TO TIGHTEN EXCESSIVELY THE DICES (F).

L'APPLICAZIONE DEL COMIGNOLO ALLA CANNA FUMARIA, RISULTA ESSERE ESTREMAMENTE FACILE E VELOCE DA ESEGUIRE.

- 1) TOGLIERE IL COPERCHIO (A)
- 2) TOGLIERE LA COPERTURA (B)
- 3) APPLICARE LA MALTA CEMENTIZIA ALLA TESTATA DELLA CANNA FUMARIA (E)
- 4) POSIZIONARE LA CONTROCOPERTURA (C) SULLA CANNA FUMARIA (E)  
VERIFICANDONE LA PLANARITA'
- 5) RIMONTARE I COMPONENTI (A) - (B)

N.B. QUALORA SI RENDESSE NECESSARIO SMONTARE LA SCHERMATURA (D) SVITANDO I QUATTRO DADI (F), NELLA FASE DI RIMONTAGGIO FARE ATTENZIONE A NON STRINGERE ECCESSIVAMENTE I DADI (F).